


Clocks And Timer Controls

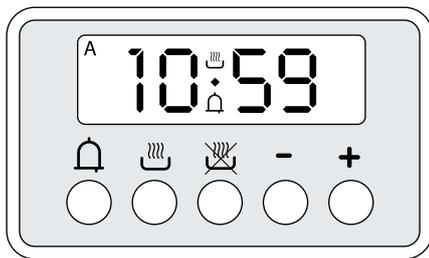

Digital Clock (24 Hour Clock)

Always ensure the oven is in manual mode - the pot symbol with the steam coming from it should be displayed. If there is an [A] on the display it means that the oven is in auto mode, to cancel this you must press both pot symbol buttons simultaneously. The oven will not operate if it is pre programmed; it has to be brought back to manual mode.

1. To set or adjust the time:

Press both pot buttons simultaneously and then to adjust the timer press either the plus or minus **- +** button accordingly.

2. To set the alarm:

Hold in the bell button then the **+** plus button until you reach the required time. If you go over the required time, press the **-** minus button to bring it back.

You will now notice a bell symbol on the display, this highlights that the alarm is on. If you need to check how much time is left on the alarm-press the bell button again as this will return to the time display. When the alarm goes off the oven will remain on and will ring for seven minutes unless turned off, which can be done


by pressing the bell button . You can adjust the tone of the alarm-only when the alarm is ringing press the minus button **-** and it will scroll through three available tones. Select the tone that you require, this tone will then sound the next time you set the alarm.

3. Pre-programming the oven:

Press the button. Put in the duration that you want to cook the item for by pressing the **+** button.

Press the button. Select the time that you want the item to finish cooking (by pressing the **+** button).

You then need to select the mode and temperature.

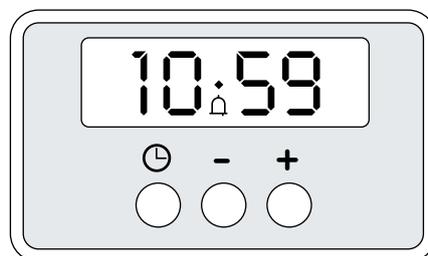

Digital clock (Non programmable)

1. To set or adjust the time:

Press the clock button once and then release. After you have pressed the clock button once, you can then immediately set the minutes by using the plus button **+**.

If you enter an incorrect time you can use the minus button **-** to correct the time. Press and hold the clock button until the LED display flashes to set the hours.

ICON	MODE
	Minute Minder
	Automatic Cooking Time
	End of Cooking Time
- +	Timer Settings

2. To set the alarm:

Only press the plus button **+**, until you reach the set time required. If you go over the time, press the minus button **-** to bring it back. A maximum of 99 minutes can be set. You will now notice a bell symbol on the display, this highlights that the alarm is on. The display will only show the countdown of the timer while it is set, it will not show the time.

When the alarm rings, the oven will remain on and the alarm will continue to ring for seven minutes unless turned off. You can adjust the tone of the alarm - only when the alarm is ringing, press the minus button **-** and it will scroll through the available tones. Select the tone that you require, this tone will then sound the next time you set the alarm.

